

6-3. Initialization

Items to initialize

The following items must be initialized for normal system operation in cases such as after the 12-volt battery is reconnected, or maintenance is performed on the vehicle.

Item	When to initialize	Reference
Power back door (if equipped)	<ul style="list-style-type: none"><li>• After reconnecting or changing the 12-volt battery</li><li>• After changing a fuse</li></ul>	P. 65
Engine oil maintenance data (U.S.A. only)	After changing engine oil	P. 493
Tire pressure warning system	<ul style="list-style-type: none"><li>• When changing tire pressure (such as when changing traveling speed, load weight, etc.)</li><li>• When changing the tire size</li></ul>	P. 509

